

Note: these instructions are primarily written for Model 6, but should also work for any model that has a wick raiser shaped with a round barrel and 1 long gear arms (see right). Models 2 and 1 do not have the gear arm, but the rest is fairly similar. Note: Model 7 has a 2-piece wick raiser (barrel and gear arm), but many of the steps are similar.



1. Remove Old Wick

- a. Twist and remove the gallery
- b. Twist and remove the outer wick tube (Model 7 only)
- c. Turn the wick raiser knob to lower the wick down until it disengages from the wick raiser gear
- d. Once free from the gear, pull the wick and wick raiser out from the bottom
- e. Remove the wick raiser from the wick

2. Attach Wick Raiser to Wick

- a. Insert the new wick inside the barrel of the wick raiser so that the top is about $\frac{2}{3}$ from the top of the wick and the bottom is about $\frac{1}{2}$ way down the wick; the gear arm should be pointing toward the top of the wick



3. Insert Wick Raiser

- a. For Model 7 only, insert the wick and carrier (carrier without the gear arm) from the top into the burner
- b. Line up the gear arm with the small hole located just below the wick raiser knob
- c. Insert the top of the wick into the bottom of the burner, and the gear arm into the hole; for Model 7 only, this step includes only the gear, and once inserted, squeeze together the bottom of the carrier to lock the gear in place



4. Engage the Wick Raiser Knob Gear with the Wick Raiser

- a. Push the wick and wick raiser up until the gear arm engages with the wick raiser knob gear
- b. Turn the wick raiser knob to see if the wick raiser moves up – if it does, wind it up until the barrel is most of the way into the burner; if it doesn't move, try pushing up again on the bottom of the wick raiser with a little bit of wiggling



5. Prep for Lighting

- a. Remove paper tabs from bottom of wick (if present)
- b. Replace outer wick tube and gallery (Model 7 only)
- c. Soak new wick for 1 hour before lighting